


## Cleanbench Parts Identification



# Table of Contents

• Accessories	3
• Front Left Leg	4
• Back Left Leg	5
• Back Right Leg	6
• Front Right Leg	7
• Control Valve	8
• Valve Arm Assembly	9
• Flow Restriction	10
• Air Filter	11
• Caster Adjustment	12
• Leveling Foot	13
• Tubing Fittings	14
• Connecting Tubing	15
• Plumbing Schematic	16
• More Details, Isolator Leg	17
• More Details, Control Valve	18


## Accessories

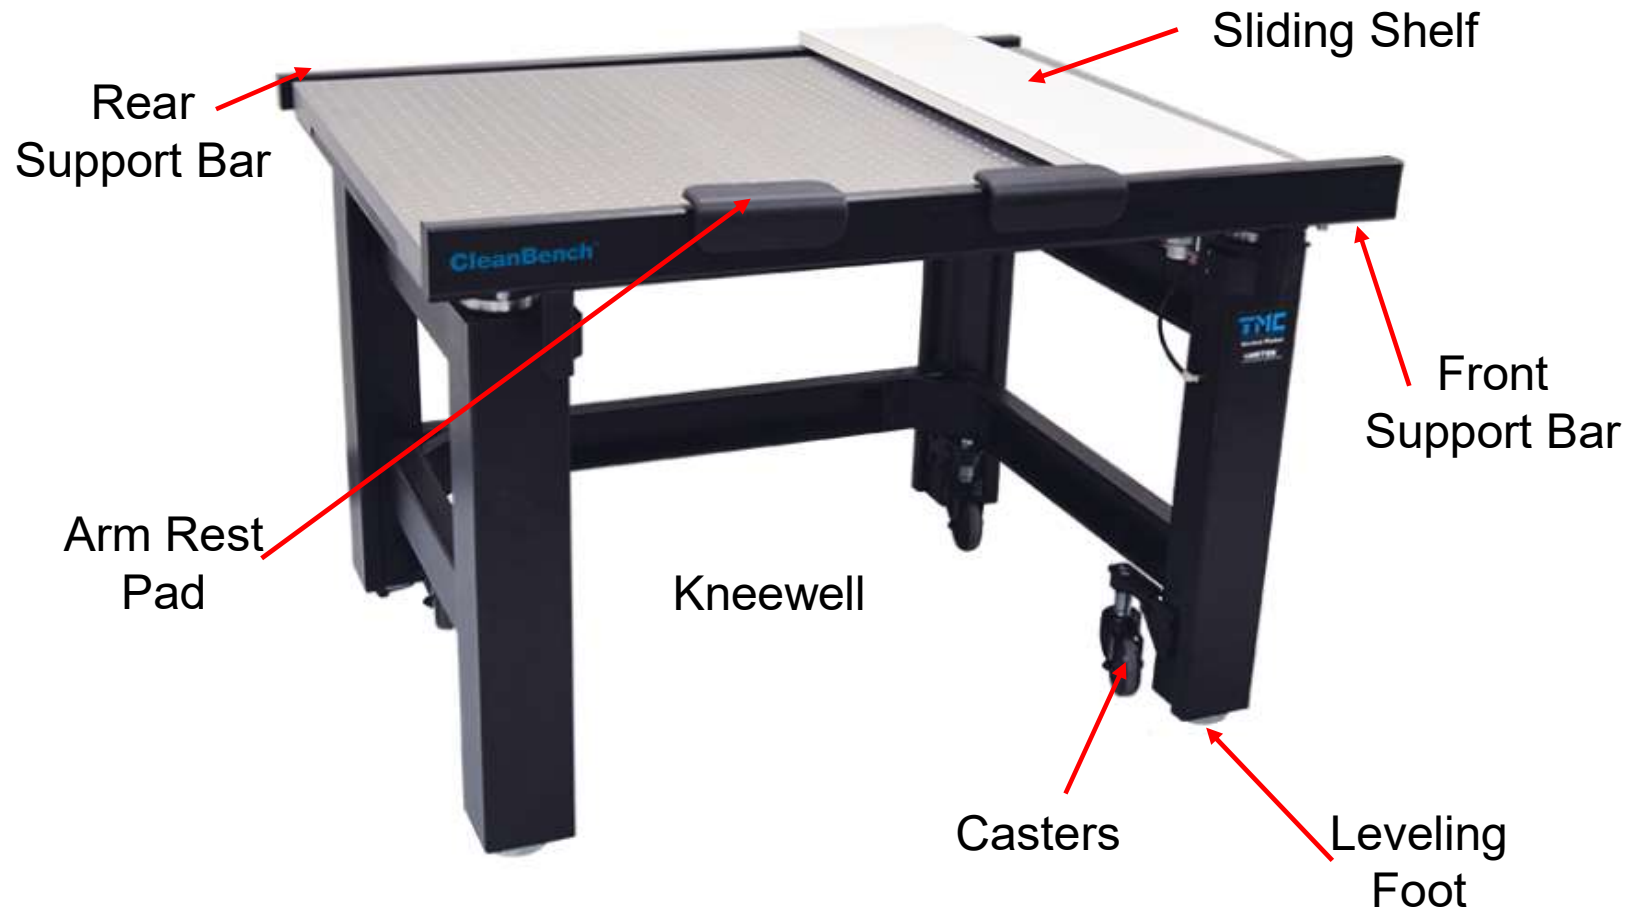

## Front Left Isolation Leg, Proper Setup



## Back Left Isolation Leg, Proper setup

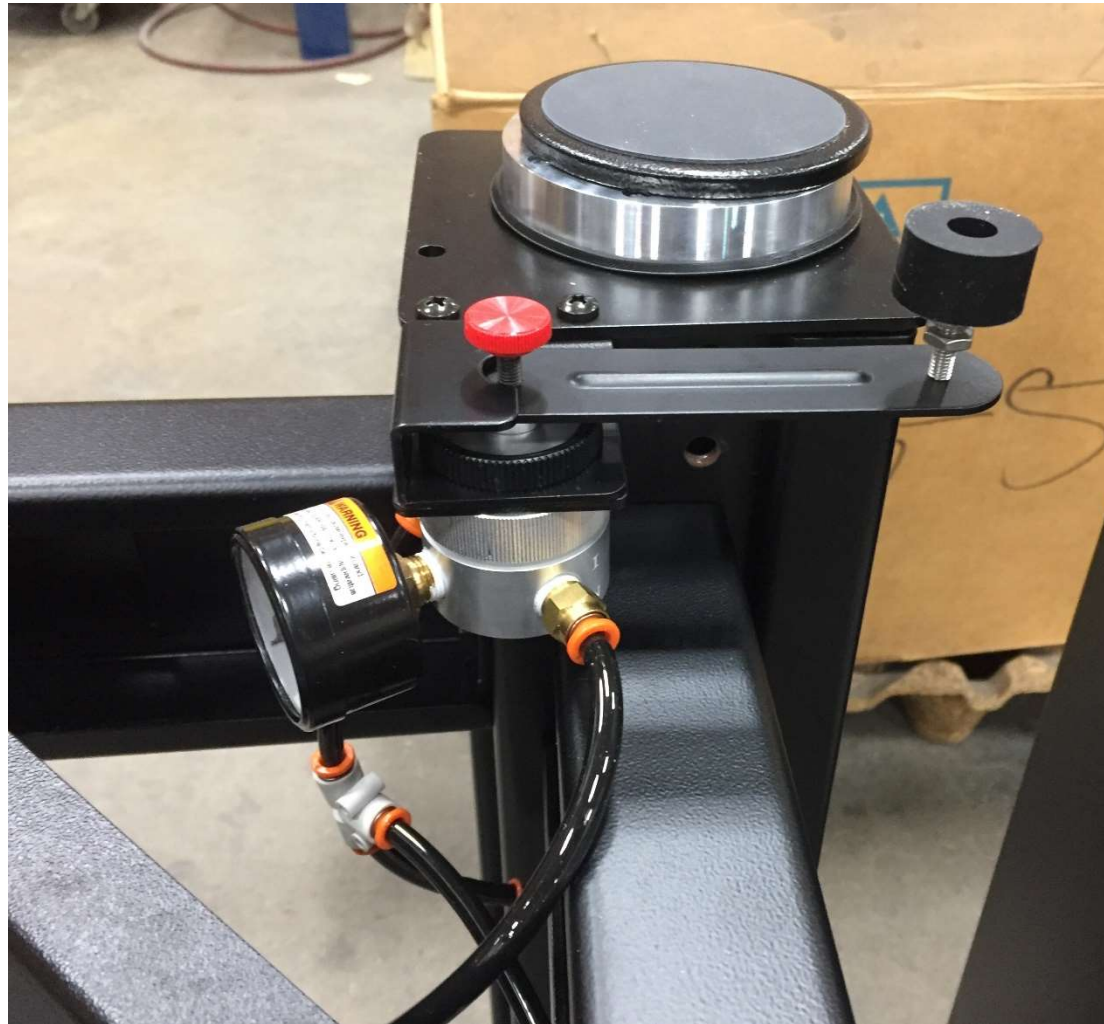


## Back Right Isolation Leg, Proper Setup



## Front Right Isolation Leg, Proper Setup



# Control Valve Part Identification, 86-19888-00

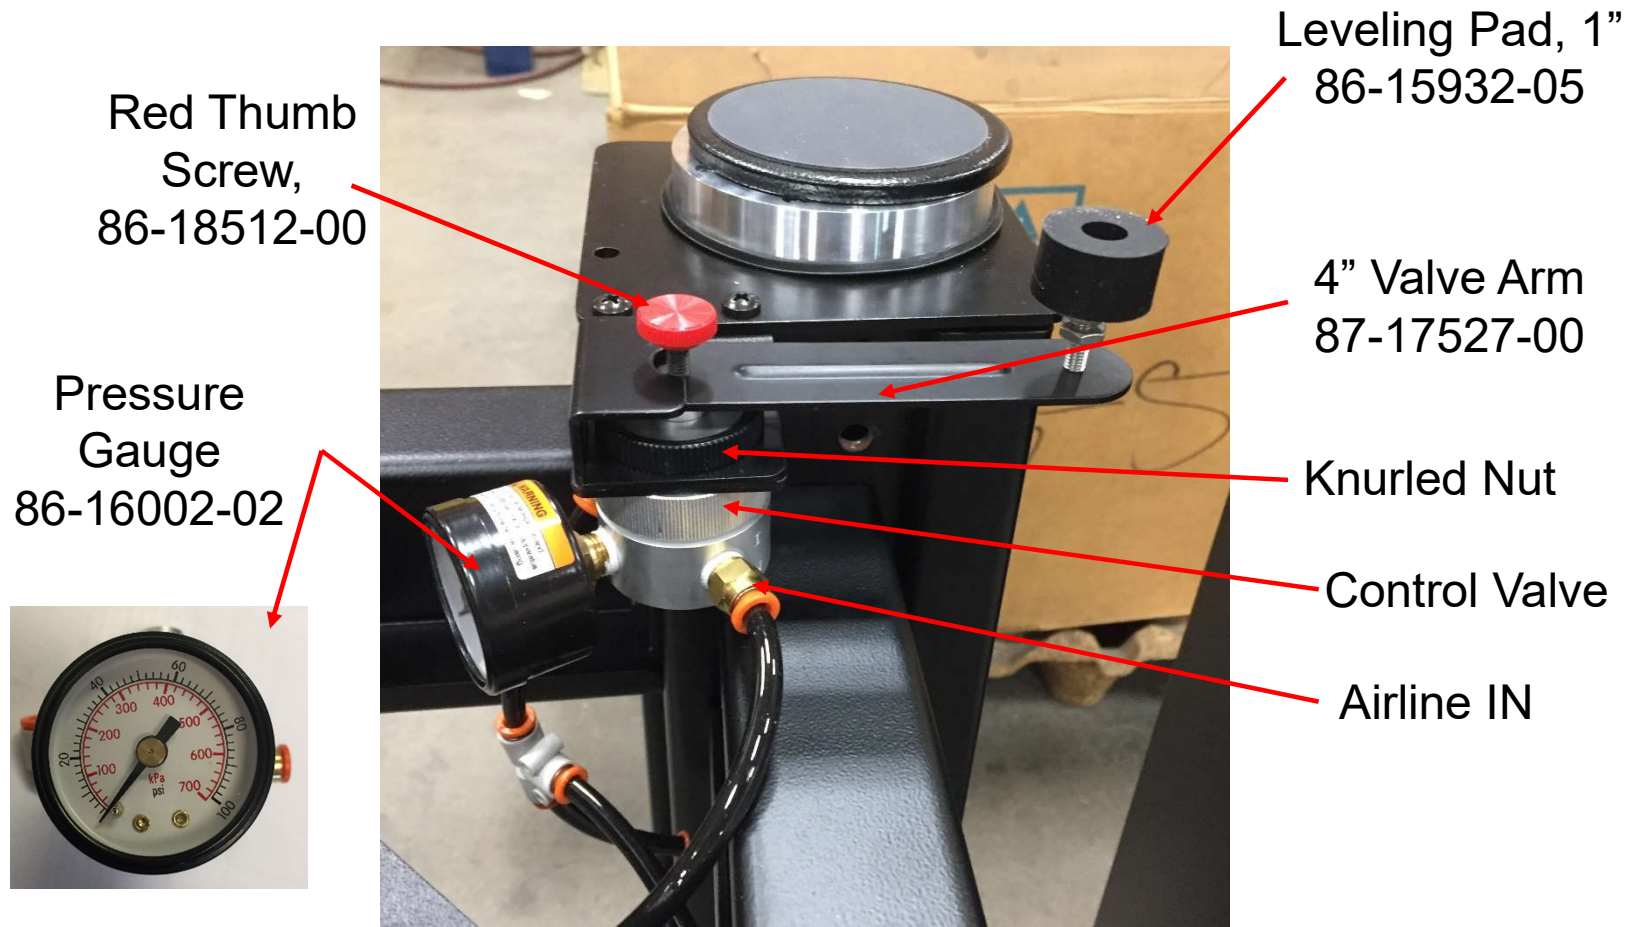




## Valve Control Arm Assembly, 86-21771-01

Thumb screw, valve  
arm, and pad




## Flow Restriction / Pigtail


Orifice inside  
tubing

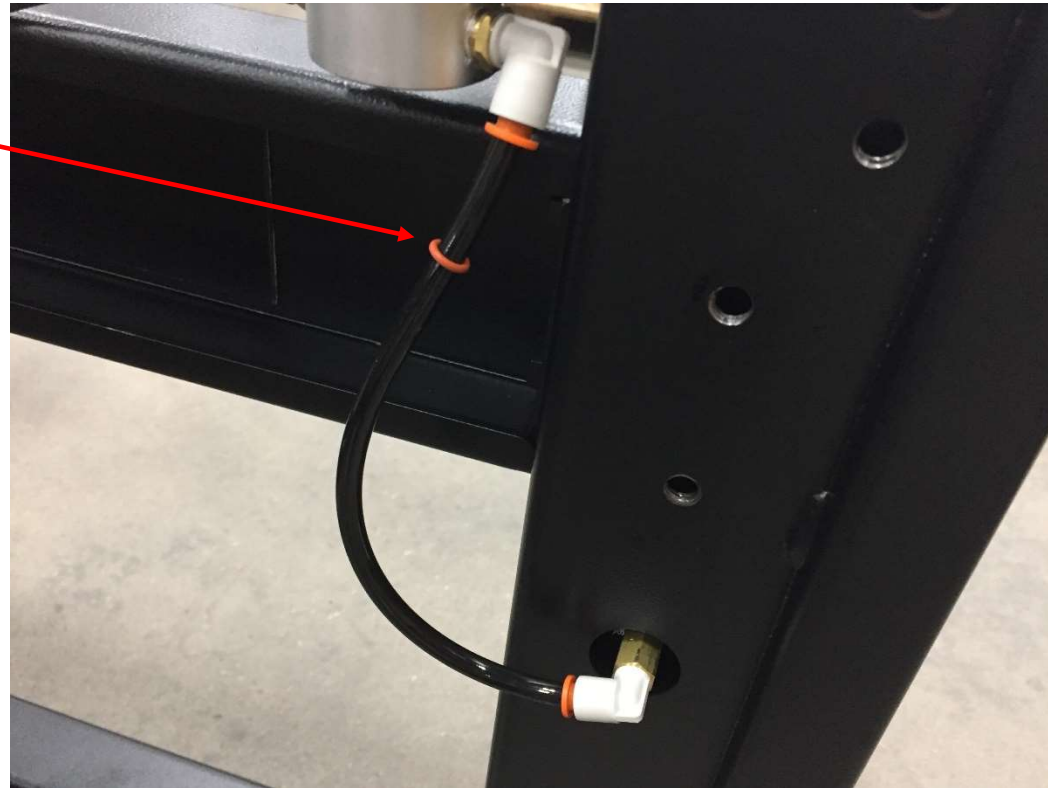


## Air Filter, 86-18770-01

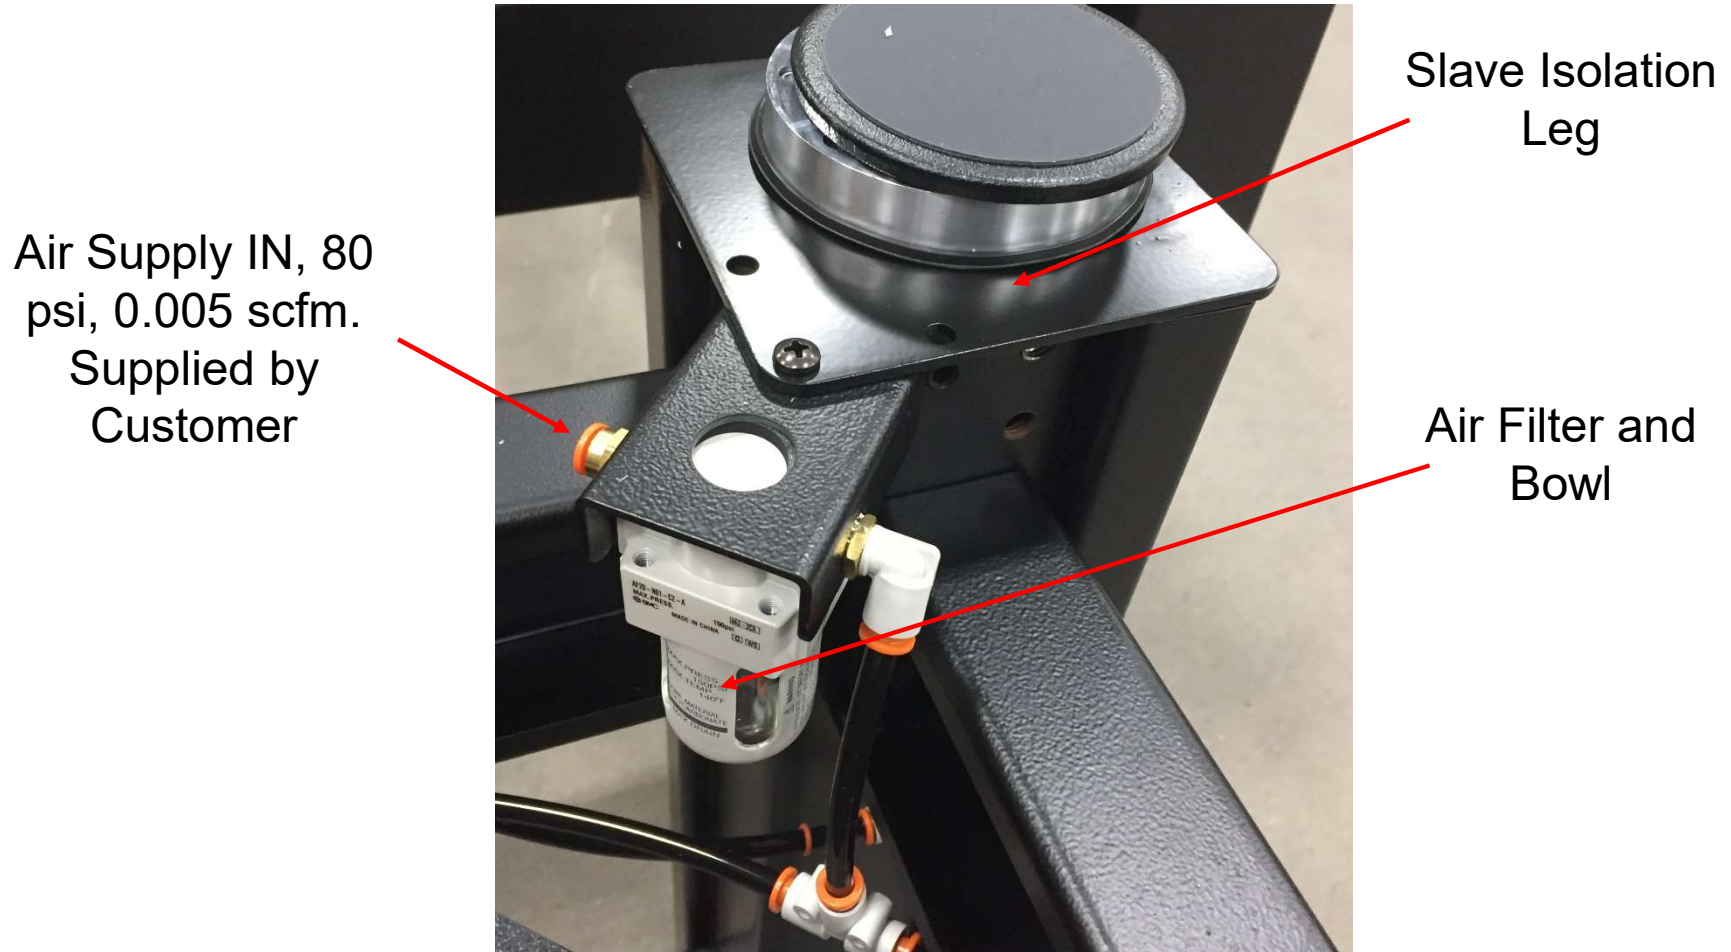

## Caster Adjustment

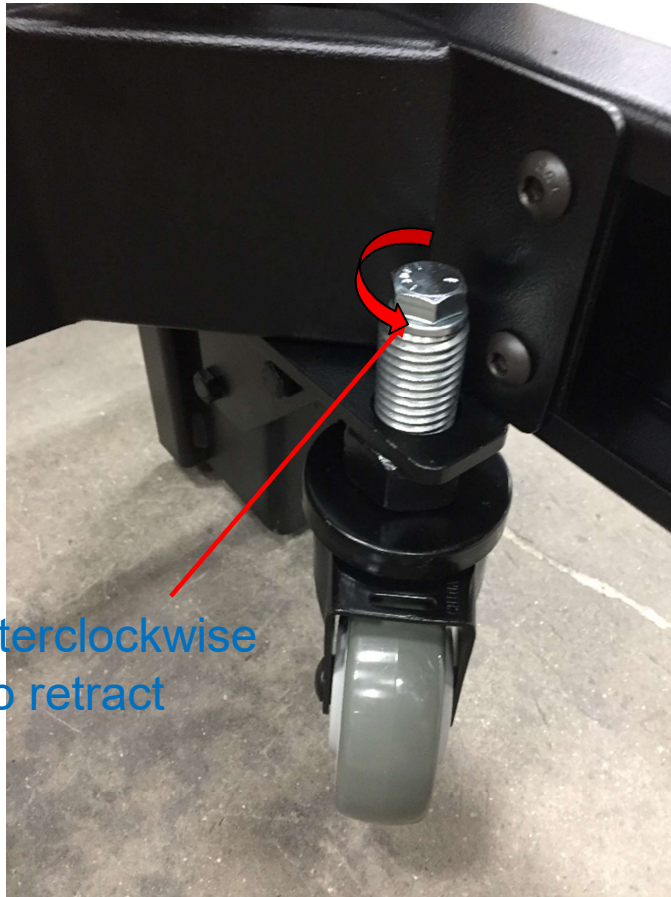

Counterclockwise  
to retract

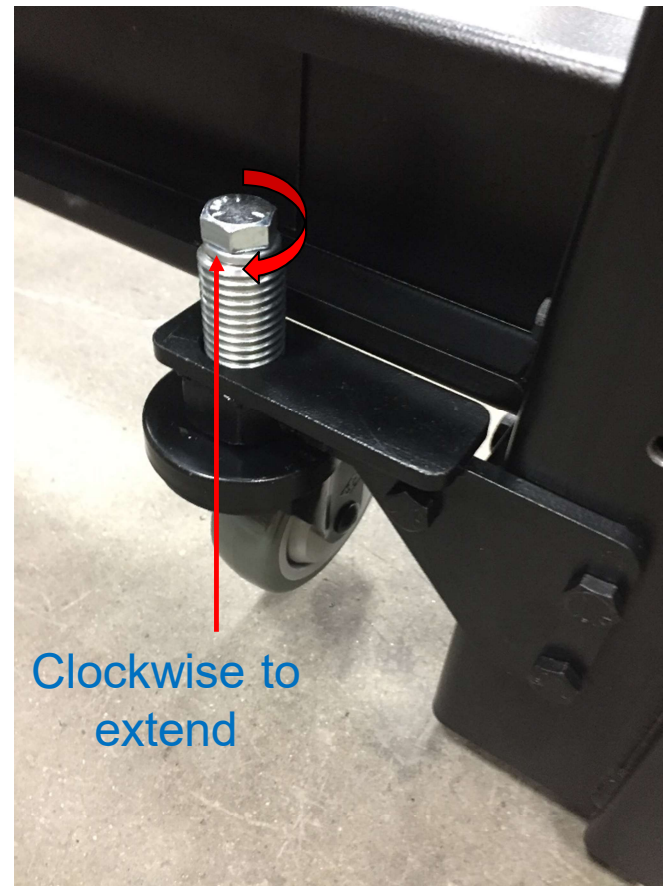

Clockwise to  
extend

## Leveling Foot



Dimple for  
Spanner Wrench



Spanner wrench for leveling  
feet and caster adjustment  
87-17327-00



Counterclockwise  
to extent leg

# Tubing Fittings



Reducing Bushing,  
1/4" NPT male to 1/8"  
NPT Female,  
40-16440-162

Male Connector,  
1/8" NPT male  
KQ2H07-34AS


1/4" OD Poly Tubing

Orifice Marker





Union,  
KQ2H07-00A

Tee,  
KQ2T07-00A

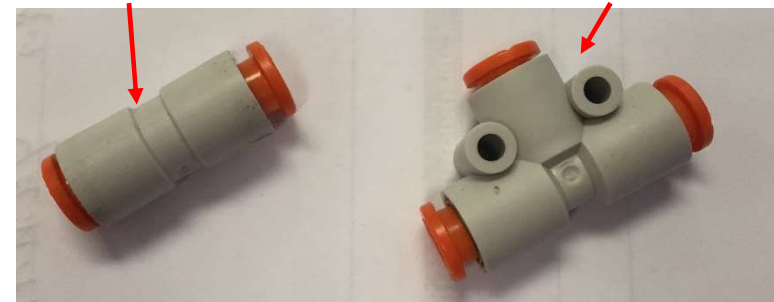


## Connecting Tubing

To Connect, Insert  
Tubing into Fitting,  
Push hard

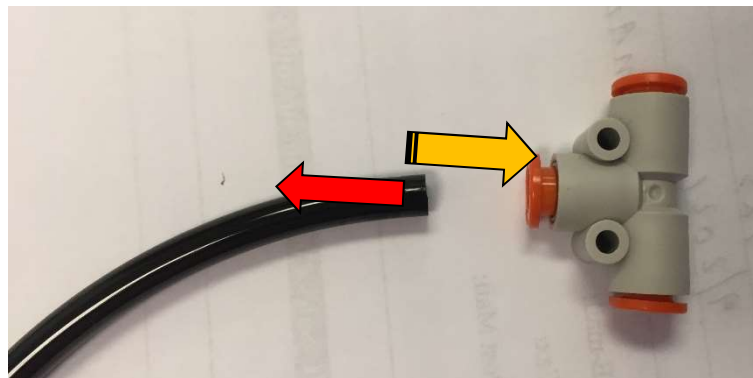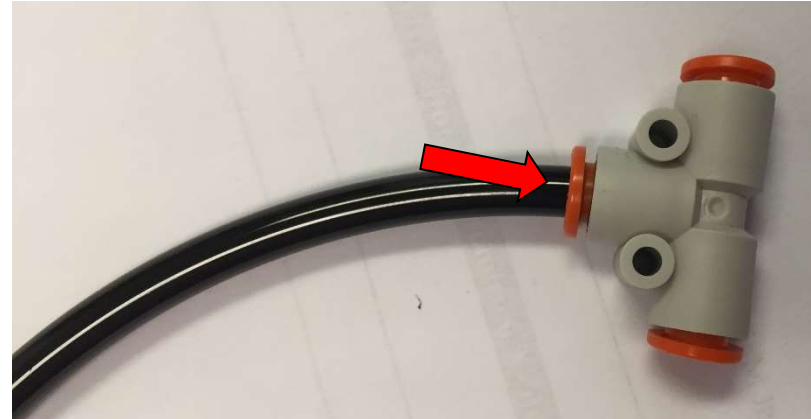

To Disconnect, Push  
Orange ring IN, while  
pulling tubing OUT

# Plumbing Schematic

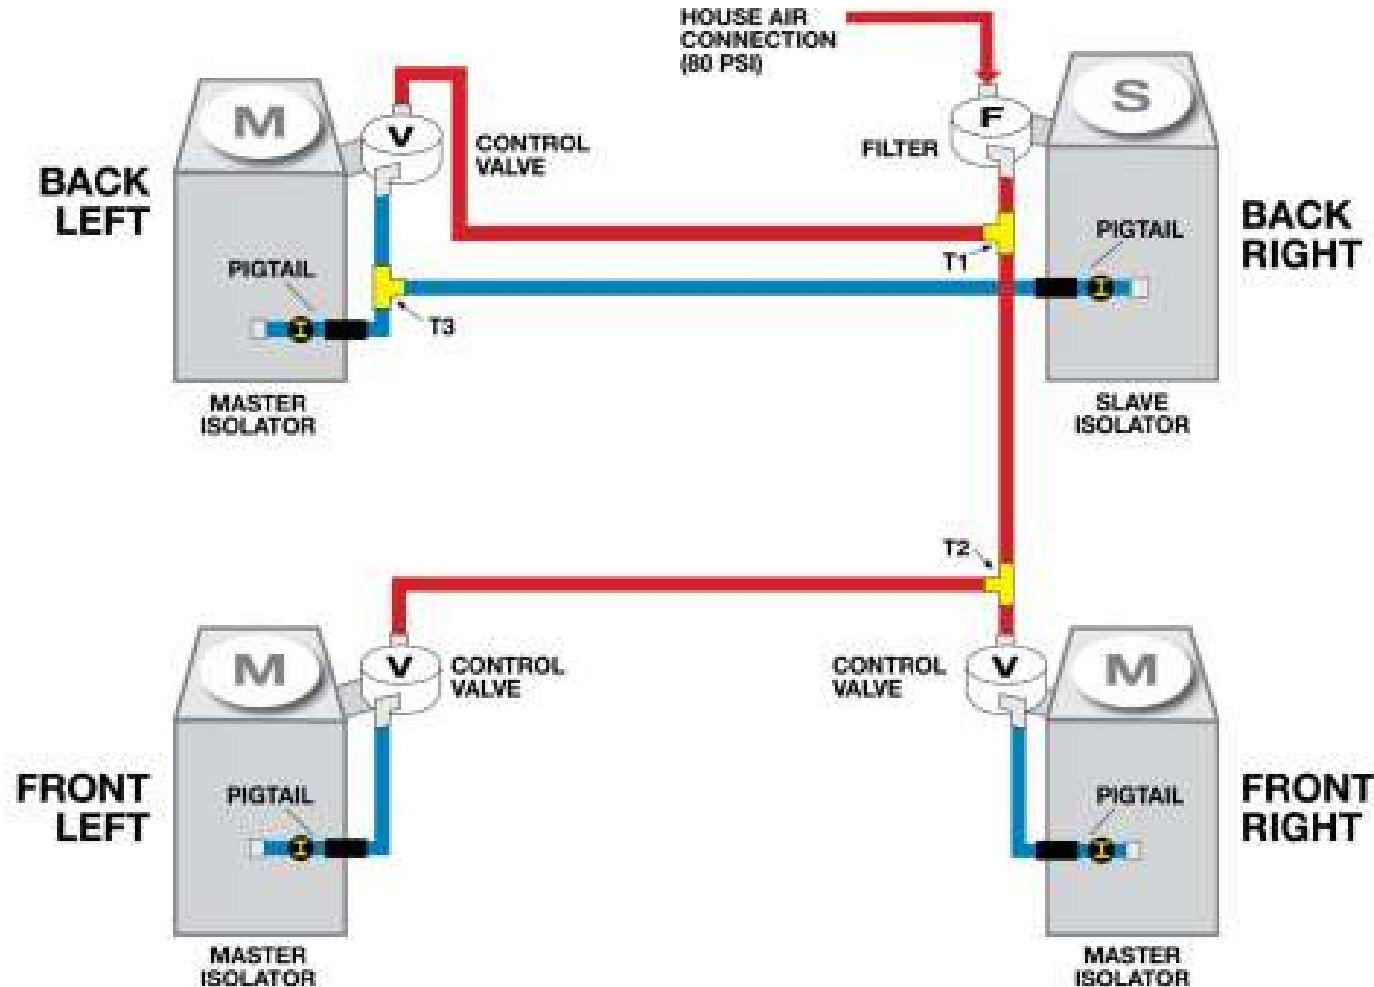




## More Details, Isolator Leg



## More Details, Control Valve Assembly w/ Gauge

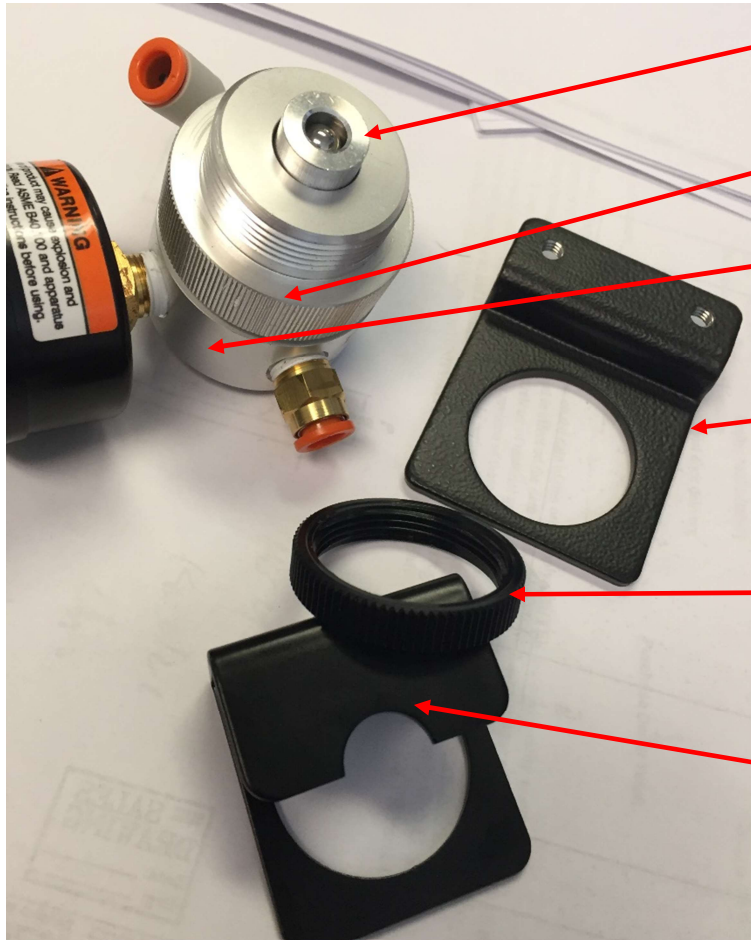

Valve Spacer

Valve Cap

Valve Body

Valve  
Bracket

Knurled  
Nut

Pivot  
Bracket



Valve  
Spacer



Air IN