

[See all 4 Products in Family](#)

TECHSPEC®

12.7mm Aluminum Coated, Littrow Dispersion Prism



30° - 60° - 90° Littrow Dispersion Prisms

Stock #43-672 10 In Stock

-

1

+

A\$140⁰⁰

ADD TO CART

Volume Pricing	
Qty 1-5	A\$140.80 each
Qty 6-25	A\$112.00 each
Qty 26-49	A\$105.60 each
Need More?	Request Quote

Product Downloads

General

Littrow Prism

Type:

Physical & Mechanical Properties

12.70

Length (mm):

±0.13

Dimensional Tolerance (mm):

Protective as needed	Bevel:
Optical Properties	
Protected Aluminum (400-2000nm)	Coating:
N-BK7	Substrate: ☐
80-50	Surface Quality:
±10	Angle Tolerance (arcmin):
Right-Handed	Image Orientation:
R _{avg} >85% @400 - 700nm w/Black Overpaint	Coating Specification:
60	Ray Deviation (°):
400 - 700	Wavelength Range (nm):
3.00	Power (fringes) @ 632.8nm:
1.00	Irregularity (fringes) @ 632.8nm:
Regulatory Compliance	
Compliant	RoHS 2015:
Compliant	Reach 219:
View	Certificate of Conformance:

Product Details

- Ray Deviation of 60° If Coated
- Ideal as a Dispersion Prism if Uncoated
- Right Handed Image

TECHSPEC® 30° - 60° - 90° Littrow Dispersion Prisms can be used for a variety of applications. Uncoated littrow dispersion prisms are used to disperse light into its component spectrum. Coated littrow dispersion prisms are used to deviate the line of sight by 60°. TECHSPEC® 30° - 60° - 90° Littrow Dispersion Prisms feature 30°, 60°, and 90° angles, and depending on whether the B-C surface is uncoated or coated, are commonly used as dispersion or beam deviation prisms. They are comprised of a N-BK7 substrate and create a right-handed image.


Dispersion Prisms (Uncoated)

Collimated white light enters into the A-C surface of the prism, is reflected at the hypotenuse surface, and then dispersed into its component spectrum at the B-C surface. Although Littrow prisms produce narrower dispersion than equilateral prisms, Littrow prisms are typically less expensive.


Beam Deviation Prisms (Coated)

Incident light enters into the aluminum coated B-C surface of the prism at the nominal angle and returns back using the same path. In spectrum dispersion applications utilizing white light, the resolution performance of Littrow prisms is equal to equilateral prisms since the optical path length through the glass substrate is the same distance round-trip. Additionally, light entered into the A-C surface will reflect twice inside the glass substrate before being emitted through the hypotenuse surface at 60°.

Technical Information

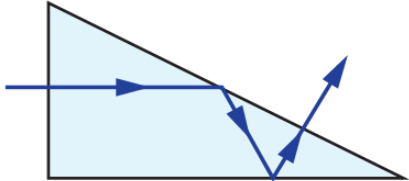

Littrow Dispersion Prism Ray Path

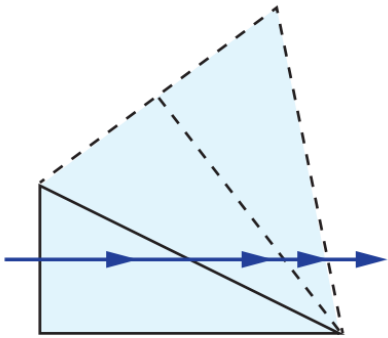

Littrow Dispersion Prism Tunnel Diagram

Stock No.	A	B	C
#43-648	12.7mm	21.9mm	12.7mm
#43-672			
#43-649	22mm	38.11mm	22mm
#43-673			

