

12.7mm Dia, 650 - 1100nm, $\lambda/2$ Achromatic Waveplate



Achromatic Waveplates (Retarders)

Stock **#39-043** **3 In Stock**

⊖ 1 ⊕ A\$1,310¹⁶

ADD TO CART

Volume Pricing	
Qty 1-5	A\$1,310.16 each
Qty 6+	A\$1,112.40 each
Need More?	Request Quote

Product Downloads

SPECIFICATIONS

General

Achromatic Waveplate **Type:**

Air Spaced **Configuration:**

Physical & Mechanical Properties

Clear Aperture CA (mm):

>8.0

Diameter (mm):

12.70

Thickness (mm):

6.00 ±0.2

Dimensional Tolerance (mm):

+0/-0.25

Construction:

Crystalline

Parallelism (arcsec):

<10

Housing Tolerance (mm):

+0/-0.25

Optical Properties

Coating:

$R_{avg} < 0.75\%$ @ 650 - 1100nm

Substrate:

Crystal Quartz and MgF_2

Retardance:

$\lambda/2$

Surface Quality:

40-20

Transmitted Wavefront, P-V:

$< \lambda/4$ @ 632nm

Retardance Tolerance:

$\lambda/100$ @ 20°C

Coating Specification:

$R_{avg} < 0.75\%$ @ 650 - 1100nm

Wavelength Range (nm):

650 - 1100

Damage Threshold, By Design:

$> 5 \text{ J/cm}^2$ @ 1064nm, 10ns, 10Hz

Regulatory Compliance

RoHS 2015:

[Compliant](#)

Certificate of Conformance:

[View](#)

Reach 247:

[Compliant](#)

PRODUCT DETAILS


- Multiple Wavelength Ranges Available
- Flat Response Over Each Broad Spectral Range
- $\lambda/4$ and $\lambda/2$ Retardance
- Mounted in Black Anodized Aluminum Housing

Achromatic Waveplates (Retarders) provide a constant phase shift independent of the wavelength of light that is used. This wavelength independence is achieved by using two different birefringent crystalline materials. The relative shifts in retardation over the wavelength range are balanced between the two materials used. Achromatic Waveplates (Retarders), with their flat response, are ideal for use with tunable lasers, multiple laser line systems, and other broad-spectrum sources.


Designed to be used at an angle of incidence of 0° , changes of $\pm 3^\circ$ will yield less than 1% change in retardance. The 23mm clear aperture waveplates will feature a cemented construction. All Achromatic Waveplates (Retarders) are mounted in an anodized aluminum housing with the fast axis clearly indicated.

TECHNICAL INFORMATION


Quarter Wave: 1200-1650nm

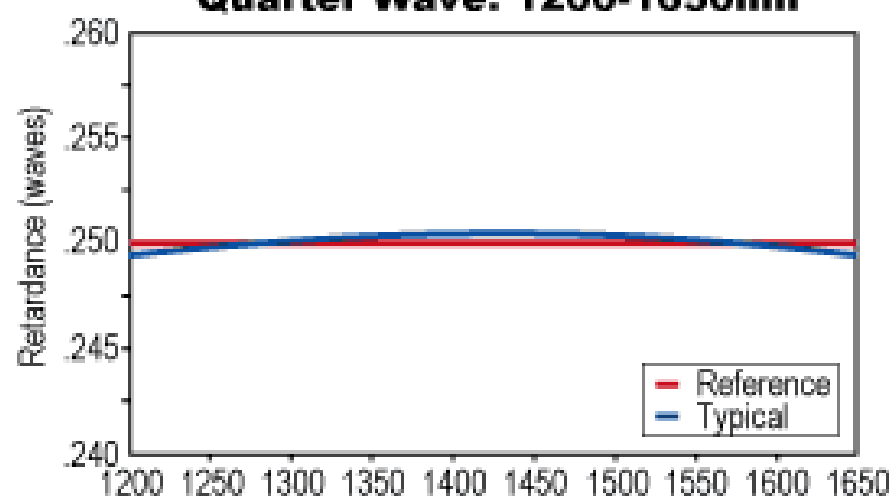


Quarter Wave: 700-1000nm

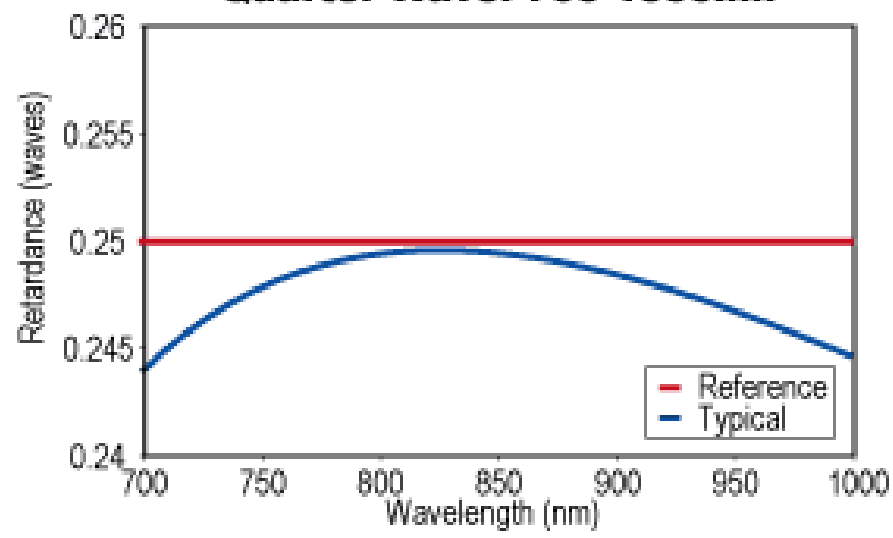


25.4mm Diameter Waveplates

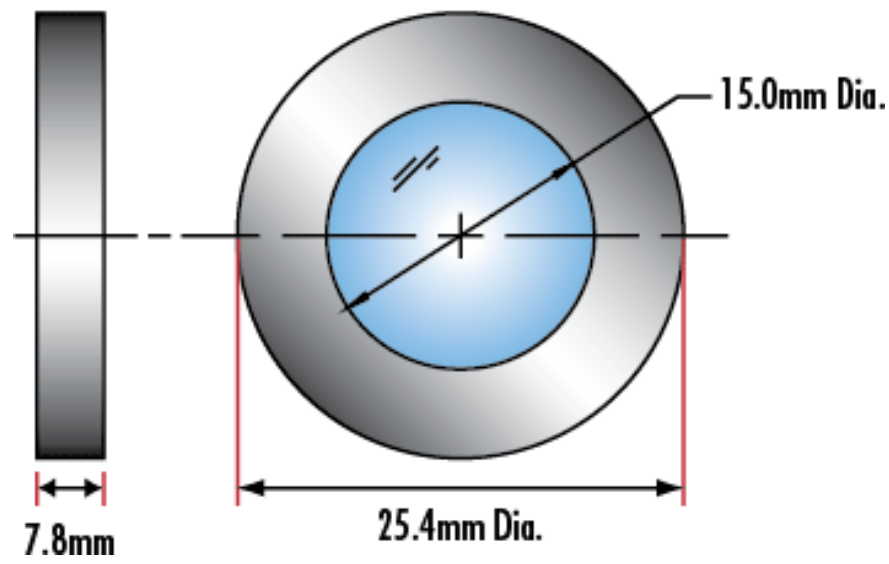


Half Wave: 1200-1650nm

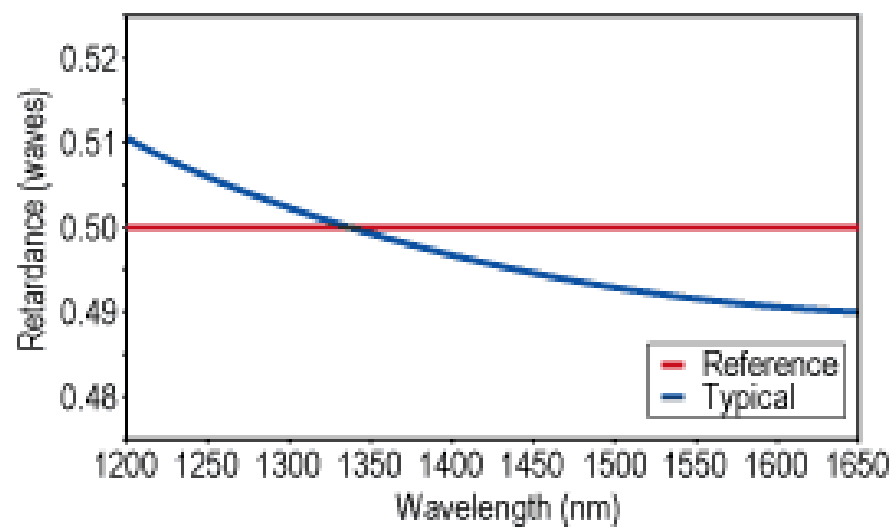


Half Wave: 700-1000nm

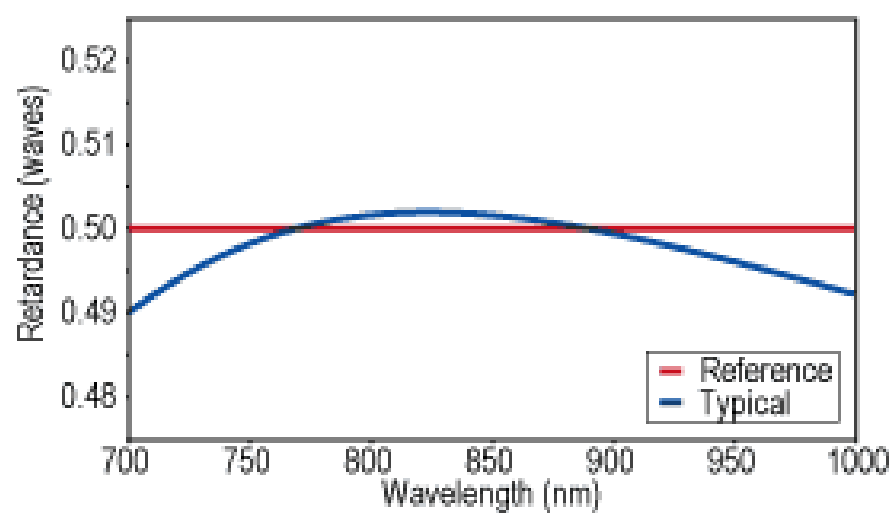

Half Wave: 465-610nm

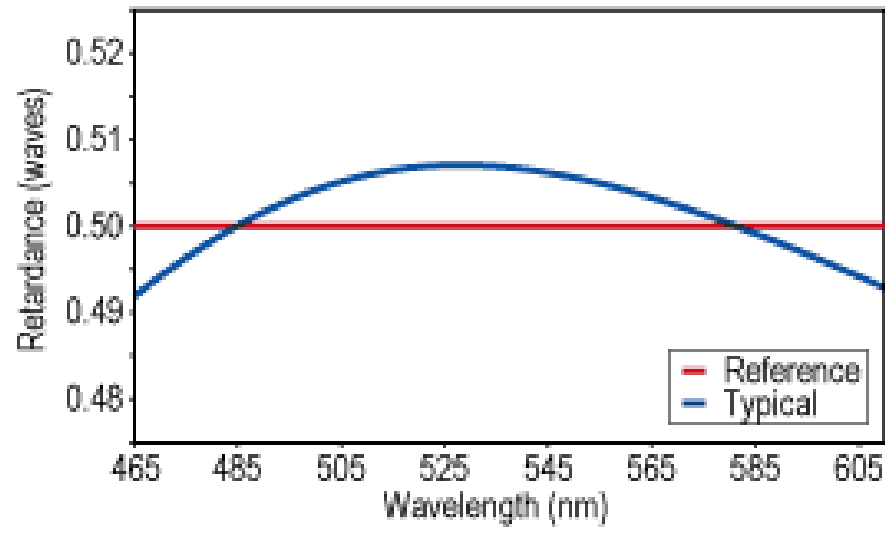

Quarter Wave: 465-610nm

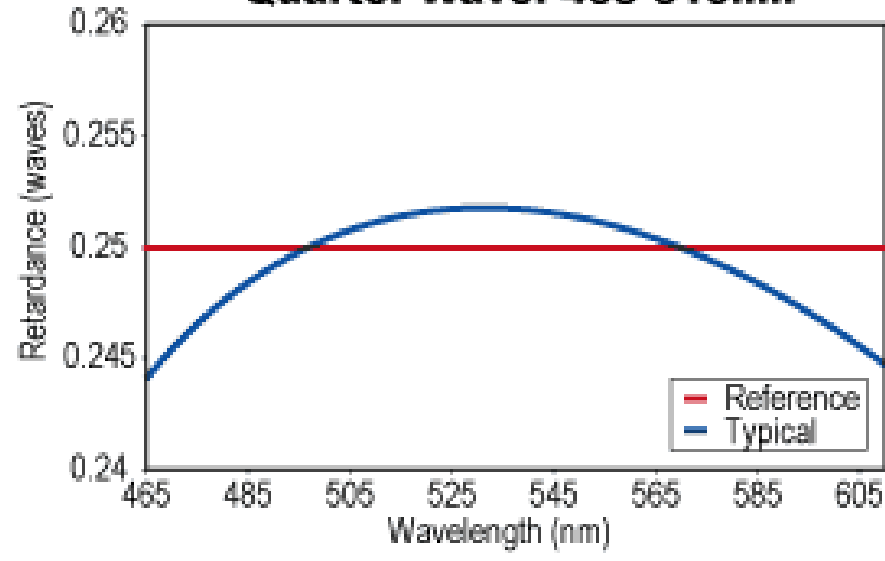

30.0mm Diameter Waveplates

