

[See all 6 Products in Family](#)

12.7mm, ISP Optics Zinc Selenide Equilateral Prism | ZC-EP-12

See More by [ISP Optics](#)



Stock #19-713 CLEARANCE **10 In Stock**

⊖ 1 ⊕ A\$1,544.⁰⁰

ADD TO CART

Volume Pricing	
Qty 1+	A\$1,544.00 each
Need More?	Request Quote

Product Downloads

General

Equilateral Prism **Type:**
GE-EP-12 **Model Number:**

Physical & Mechanical Properties

±0.25 **Dimensional Tolerance (mm):**
85 **Clear Aperture (%):**

Length of Hypotenuse (mm):

12.70

Length of Legs (mm):

12.70

Optical Properties

Coating:

Uncoated

Substrate:

Zinc Selenide (ZnSe)

Surface Quality:

60-40

Angle Tolerance (arcmin):

±10

Wavelength Range (nm):

600 - 18000

Wavelength Range (µm):

0.6 - 18

Surface Flatness (P-V):

2λ

Regulatory Compliance

RoHS 2015:

Compliant

Certificate of Conformance:

[View](#)

Reach 240:

Compliant

Product Details


- CaF₂, Ge, and ZnSe Substrates
- Ideal for Wavelength Separation
- Designed for Use with Collimated Sources
- Additional [Infrared Optics](#) Available

• Due to material supply chain disruptions with germanium, there may be increased lead times and price changes on our germanium products. For more information, please contact our [customer service team](#).

ISP Optics Infrared (IR) Equilateral Prisms, also referred to as dispersion prisms, feature three equal 60° angles and are used in wavelength separating applications. These prisms are available with calcium fluoride (CaF₂), germanium (Ge), or zinc selenide (ZnSe) substrates. CaF₂ equilateral prisms offer a low refractive index and broad transmission range from 0.2 – 7µm, making them ideal for applications requiring high transmission from the UV through the IR. Ge equilateral prisms are transmissive from 2 – 14µm with a high index of 4.002 at 11µm and are used in applications where the optical path length needs to be maximized. ZnSe equilateral prisms have high, even transmission from 0.6 - 18µm and are typically integrated with CO₂ laser systems that feature a 632.8nm HeNe alignment laser and 10.6µm output beam.

Note: Special care should be taken when handling Zinc Selenide as it is a toxic material. Always wear rubber or plastic gloves to avoid risk of contamination.

Technical Information

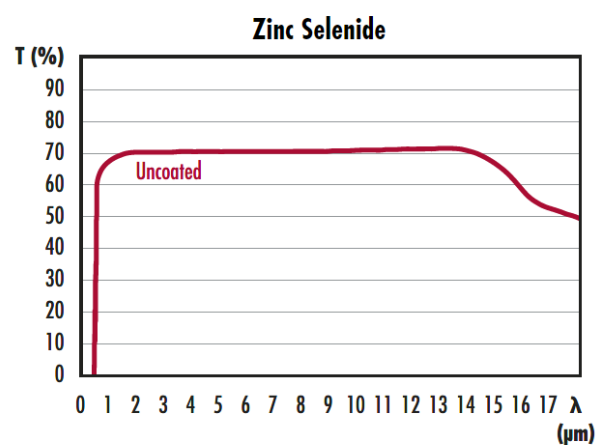

Special Handling

These optics require special handling to avoid damage and ensure long-term performance. Proper handling, cleaning, and storage are essential to maintain optical quality. Explore our [Optics Cleaning Resources](#) for step-by-step guides and best practices. For personalized assistance, [Email us](#) or [Chat](#) with our technical support team.



Component Handling Tools

