

[See all 6 Products in Family](#)

TECHSPEC® 1X-8X Magnification, NIR I Coated, Adjustable Mounted Anamorphic Prism Pair



1X-8X Magnification, NIR I Coated, Adjustable Mounted Anamorphic Prism Pair

Stock #34-553 **5 In Stock**

⊖ 1 ⊕ A\$862⁰⁰

ADD TO CART

| Volume Pricing | |
|----------------|-------------------------------|
| Qty 1-5 | A\$862.40 each |
| Qty 6-25 | A\$689.60 each |
| Qty 26-49 | A\$648.00 each |
| Need More? | Request Quote |

Product Downloads

General

Beam Shaping **Type:**

Physical & Mechanical Properties

52 x 27.7 x 35.6 **Dimensions (mm):**

Optical Properties

NIR I (600-1050nm) **Coating:**

N-SF11 **Substrate:**

Magnification:
1X-8X (with 1mm Dia. Minor Axis Input Beam)

20-10 **Surface Quality:**

3 **Angle Tolerance (arcmin):**

Coating Specification:
 $R_{avg} \leq 0.5\%$ @ 600 - 1050nm

600 - 1050 **Wavelength Range (nm):**

Damage Threshold, By Design:
7 J/cm² @ 1064nm, 10ns

3.00 **Power (fringes) @ 632.8nm:**

1.00 **Irregularity (fringes) @ 632.8nm:**

Threading & Mounting

Mounted (Adjustable Magnification) **Mount:**

Regulatory Compliance


[View](#) **Certificate of Conformance:**

Product Details


- Converts Elliptical Beam to Circular
- Anti-Reflection Coated for Common Diode Wavelengths
- Mounted and Unmounted Versions Available

An anamorphic prism pair is used to expand a laser beam in one dimension. This makes it ideal for converting the elliptical beam shape of laser diodes into a nearly circular one. Mounting our unmounted anamorphic prism pair in the proper orientation will provide magnification ratios from 2:1 - 6:1. Designed at 650nm and broadband anti-reflection (BBAR) coated for 600 – 1050nm, it provides excellent performance at both 635nm and 670nm.


The center of the output beam is displaced 5.9mm from center of the input beam in our mounted anamorphic prism pair. The Dovetail Accessory Mount allows it to rotate with respect to the laser, simplifying bench-top mounting. The C-Accessory Mount allows our full line of [C-Mount components](#) to be used in conjunction with the mounted anamorphic prism pair.

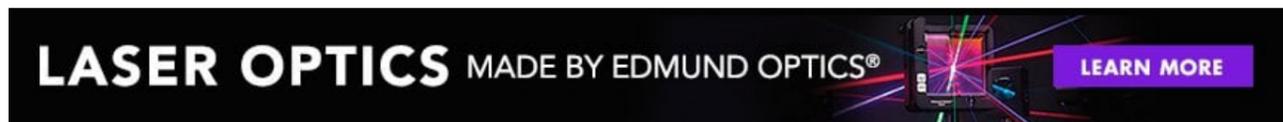

Technical Information


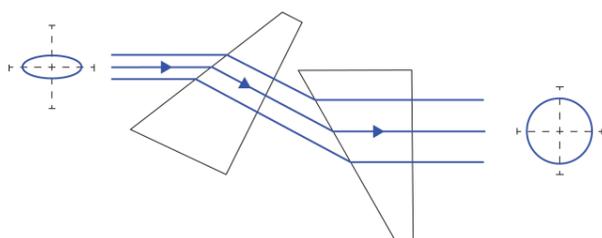


Ray path for anamorphic prism pairs, showing transformation of elliptical beam to circular beam

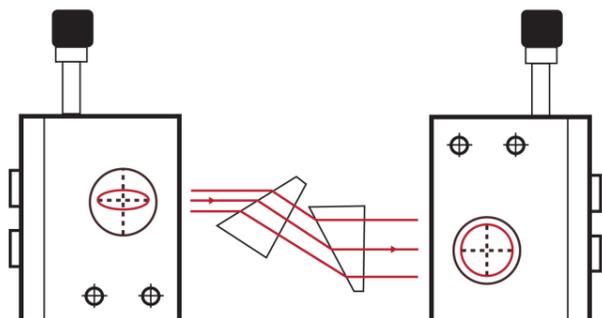

Ray path for mounted variable magnification anamorphic prism pairs, showing entrance and exit apertures on the housing

| Typical Values | | | | |
|----------------|------------|------------|-------------------------|-----------------------|
| Magnification | $\alpha 1$ | $\alpha 2$ | Vertical Separation (V) | Beam Displacement (D) |
| 2X | -20.6° | -6.5° | 1.75mm | 4.50mm |
| 3X | -29.7° | -0.9° | 2.56mm | 5.45mm |
| 4X | -34.1° | 2.1° | 3.01mm | 5.74mm |
| 5X | -37.4° | 3.2° | 3.33mm | 6.15mm |

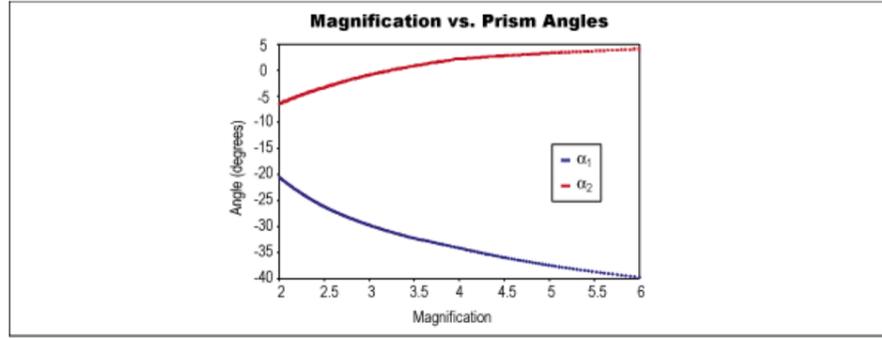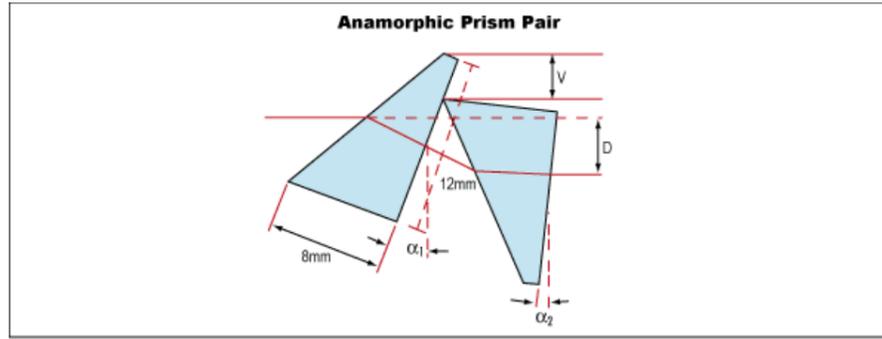

Beam Expander Mounting Configurations.

Click on an item below to be brought to that item's product page.

