

[See all 64 Products in Family](#)

40° Diffusing Angle 12.5mm Unmounted



Stock **#35-868** 4 In Stock

-

1

+

A\$158^{.40}

ADD TO CART

Volume Pricing	
Qty 1-5	A\$158.40 each
Qty 6+	A\$124.80 each
Need More?	Request Quote

Product Downloads

General

Type:

Holographic Diffuser

Physical & Mechanical Properties

Diameter (mm):

12.50

Dimensional Tolerance (mm):

±0.5

Thickness (mm):

0.78

Construction:	
Unmounted	
Optical Properties	
Angle Tolerance (°):	±4
Diffusing Angle (°):	40 (FWHM)
Substrate:	Polycarbonate
Transmission (%):	>85
Wavelength Range (nm):	400 - 700
Damage Threshold, By Design:	0.22 J/cm ² @ 1064nm, 10ns (typical)
Environmental & Durability Factors	
Operating Temperature (°C):	-30 to +100 (Maximum of 240 Hours)
Regulatory Compliance	
RoHS 2015:	Compliant
Certificate of Conformance:	View
Reach 247:	Compliant

Product Details



- Transmission Efficiency>85%
- Elliptical and Circular Diffusing Outputs
- Ideal for Visible and Near-Infrared Applications
- [UV Holographic Diffusers](#) Also Available

Holographic Diffusers are used to control the diffuse area of illumination and increase transmission efficiency to greater than 90% from filament lamps, LEDs, arc lamps, and other sources. [Standard ground glass](#) and [opal glass](#) will produce diffuse illumination, but the diffuse light area will often exceed the requirements of the system. This over-illumination, associated with traditional diffusers, reduces efficiency and can often lead to added costs by requiring higher power illumination sources, lenses, and possibly filters. It is important to note that diffusing angles are given for a collimated input beam and angular divergence will vary for different incidence angles.


Unlike many holographic elements, these specific polycarbonate components transmit light in both the visible and near-infrared. Zero order, or a specular component, of transmitted light is less than 1% for visible wavelengths, but may be higher if these diffusers are used at wavelengths >700nm. Available individually, as umounted sheets, or in sets of four filters. Holographic Diffusers can be cleaned with a de-ionized water rinse, followed by a forced air drying. Wipe gently with lens tissue soaked with methanol, followed with a forced clean air or nitrogen drying. Holographic Diffusers are resistant to methanol and methylene chloride.

Note: Matte surface should face the light source. To clean holographic diffusers, dampen a lint free cloth wipe with methanol and gently wipe the entire diffuser surface in a gentle, circular pattern. Immediately and carefully blow off the clean diffuser area with dry compressed air. Caution: cleaning may cause a change in the optical performance of the diffuser.


Technical Information

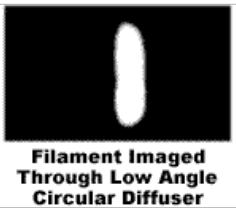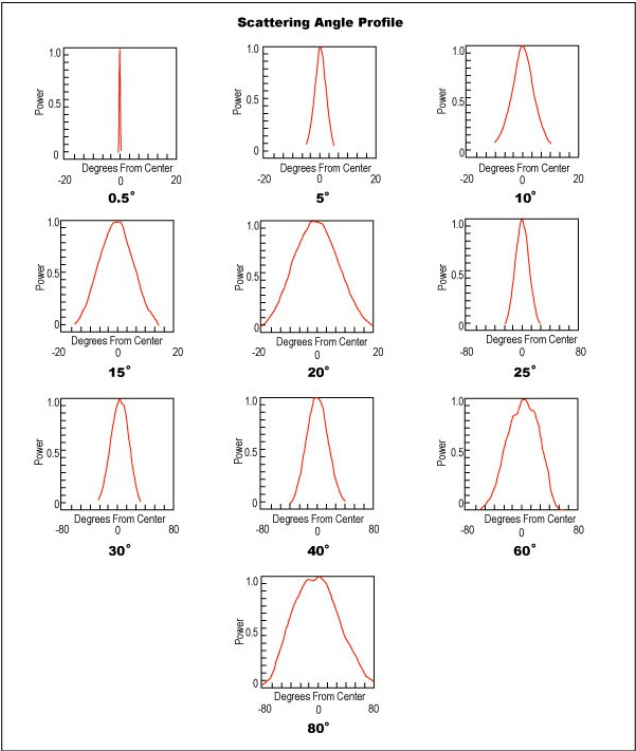


Filament Imaged Through Low Angle Circular Diffuser

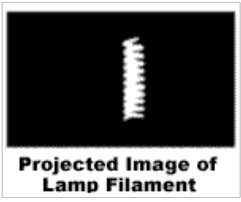

Projected Image of Lamp Filament

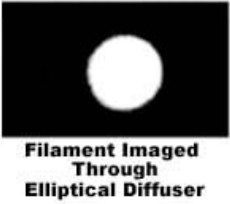

Filament Imaged Through Elliptical Diffuser

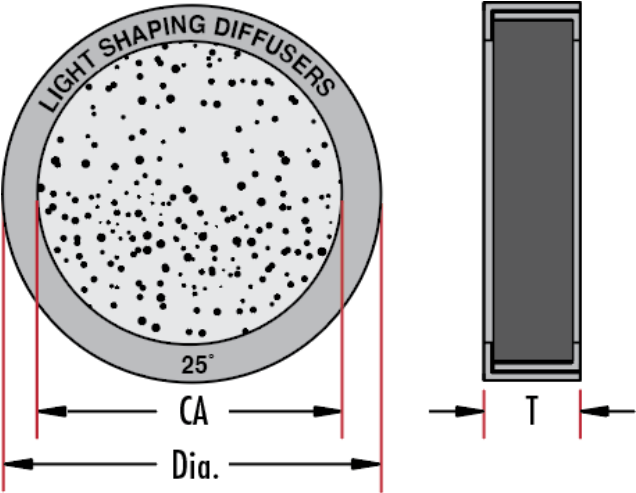

Compatible Mounts